




SCUBAPRO OTS GUARDIAN / STEALTH HUD MOUNT

Installing of HUD mount

Tools Needed /Recommended

Allen Wrench 3.5.mm

Patience

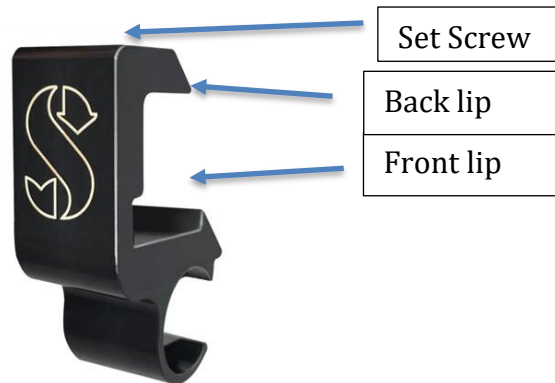

There are two ways you can attach the SCUBAPRO HUD mount to the OTS FFM. Before you do anything, make sure the set screw on the back of the HUD mount is backed off so it will not scratch the mask lens frame. It will also make it easier to install the mount. The first way is to put it on the left or right side (blue arrows below) of the mask frame. Hook the back lip of the HUD mount to the inside lens frame and slowly push the HUD mount down onto the mask it should just pop on and then slide it towards the middle, so you have the best view of the HUD screen. The other way is to gently hook the back lip of the mount to the inside lip of the lens frame and then slowly snap the front lip in place. Once it is in place, so you have the best view of the HUD screen, you can now snug (DO NOT OVERTIGHTEN IT) the set screw in place, and this is done with a – Allen wrench

