




**INSTALLATION INSTRUCTIONS
FOR
OTS GUARDIAN FFM SPECTACLE KIT (eyewear insert) P/N 920033-000**

The spectacle kit is designed to support prescription and non prescription lenses within the full facemask. The kit is easy to install and remove, requiring no tools. A one size 52mm frame is utilized.

- (A) Block
- (B) Lens Frame
- (C) Support Wire

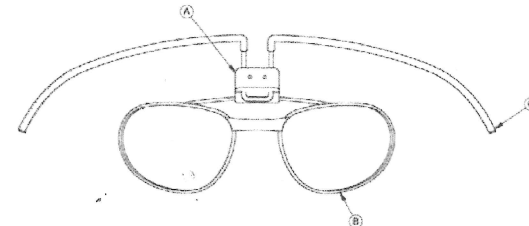

INSTALLATION - STANDARD

1. With lens frame fully inserted into block, grasp each support wire end, flex slightly inward and place spectacle kit into mask. Center and hold down in place top portion of support wire to rest securely on top of visor ledge.
2. Continue holding down top portion of support wire and with some force, push each support wire end section to rest securely in each upper corner of mask against side visor and mask rubber edge firmly.
3. Confirm center top portion of support wire is firmly secured atop visor ledge, the block is pressed firmly against visor and that the lens frame is fully inserted into block.

REMOVAL

Grasp one end of support wire and remove carefully from mask.

INSTALLATION - OPTIONAL

NOTE: Once Support wire is installed through side lugs, it should remain in mask and removed only if there is a mask change.

1. Remove lens frame from block. Insert one end of support wire through mask side lug so about 1 1/2 inches protrudes through.
2. Insert remaining support wire end into remaining mask side lug with 1/4 inch protruding through. Carefully even out both support wire ends so that 1/4 inch protrudes through the bottom of each mask side lug.
3. Pull back mask face seal. Grasp support block and slowly rotate support wire down into mask. Center and hold down in place top portion of support wire to rest securely on top of visor ledge. There should be just over 1/2 inch protruding through the bottom of each mask side lug.
4. Continue holding down top portion of support wire and with some force, push each support wire end section to rest securely in each upper corner of mask against side visor and mask rubber edge firmly.
5. Confirm center top portion of support wire is firmly secured atop visor ledge, the block is pressed firmly against visor and then insert lens frame fully into block.

REMOVAL

Remove lens frame from block. Roll back a mask side lug toward mask face seal and carefully pull out support wire. Carefully pull out support wire from remaining mask side lug.

ADJUSTMENTS

To obtain a comfortable position of the lens frame, move block up or down.

CLEANING AND MAINTENANCE

Rinse lenses with water or optical cleaner, wipe dry with tissue or optical cleaning cloth.