




506146-000 B

OTS ear/mic assembly for EXO-BR mask INSTALLATION INSTRUCTIONS

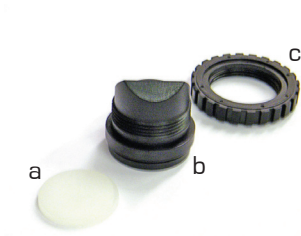

1. The communications module from the EXO-26 full-face mask (store a & b; c used in step 9 of installation.)



2. Unscrew cap from communications module plug and remove.



3. Remove plug by pushing it inward through the comm port.



4. Remove "puck" from inside of oral/nasal cavity and set aside. This will be replaced with OTS mic module.



5. Remove EXO comm module plug from inside mask.



6. Separate mic assembly as shown above to prepare for installation into EXO mask*.



7. Insert connector and pull comm cable from inside mask (and outside of oral/nasal cavity) through comm port.



8. Align push-to-talk (PTT) assy so the cable is positioned downward as shown. Note: This may take some wiggling and adjustment.




9. Tighten PTT assy by turning communication module cap clockwise until assy and cap are secure.



10. Properly installed OTS push-to-talk (PTT) assembly into EXO mask.



11. Insert mic module into oral/nasal cavity where the "puck" was removed.

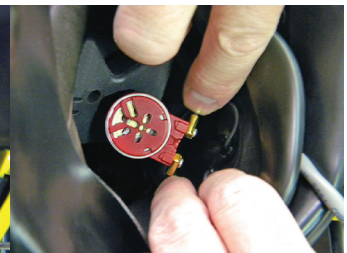


12. Position microphone to be just off diver's lips—it should not poke the diver.



13. Insert right earphone into right pocket w/ flat side of speaker toward the ear. Tuck wires under mask skirt.



14. Insert left earphone into earphone pocket. Tuck wire under chin skirt.

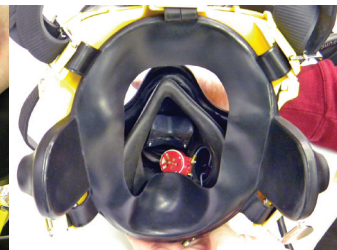

15. Back view of fully installed OTS ear/mic assy into an EXO full-face mask.

*Note: Assembly with adaptor "plug" shown.